



## 17-26 FORD F250 FRONTIER SERIES RUNNING BOARDS

ATTF201C101-BX



**MATERIAL: E-COATED STEEL / TEXTURED BLACK POWDER COAT FINISH**

**DIMENSIONS: 88.2" X 12.6" X 9.5"**

**PRODUCT WEIGHT: 90.5 LBS**

### CAUTION BEFORE INSTALLING

**Before installation** - Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.

**Customer Service: (626) 369-2121**

**ATTICA4X4 is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.**

Proper installation of this kit requires knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle.

- **Always wear eye protection when operating power tools.** •

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information:




• Name of purchase location	• Date above Bar Code
• Bar Code on side of box	• Date inside box cover

**⚠ CAUTION**

※ Please recheck fasteners after 250 miles and inspect frequently.

<b>REQUIRED TOOLS</b>	Socket	Socket	Ratchet
Wrench			

**Parts Information**


NO.	Parts Name	Size	Illustration	Qty
/	/	/		1
/	/	/		6
/	/	/		6
N22	Nuts	M8-8		30
W19	Flat Washer	φ8*24*2		30
W16	Spring Washer	φ8		30
/	/	/		/

※ Note: One pack of spare parts is provided.


## INSTALLATION I

### Mount the bracket to the vehicle.

1. Before installation, locate the driver-side mounting bracket in the packaging box and move to the driver-side of the vehicle.

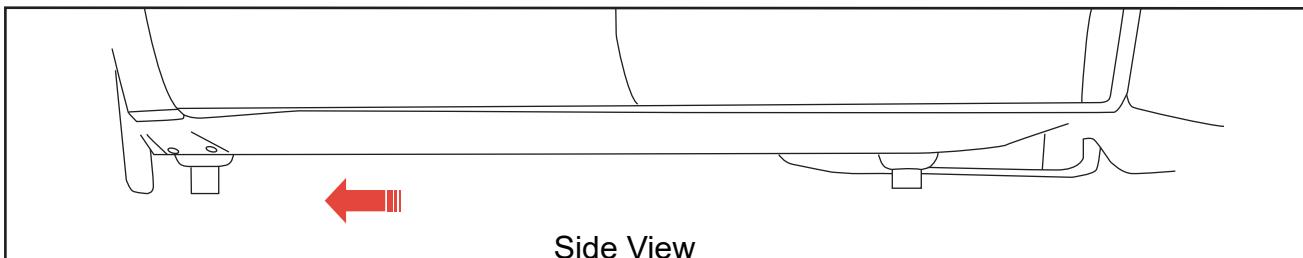


2. The arrow indicates the mounting hole on the vehicle. Attach the bracket to the vehicle's mounting hole.

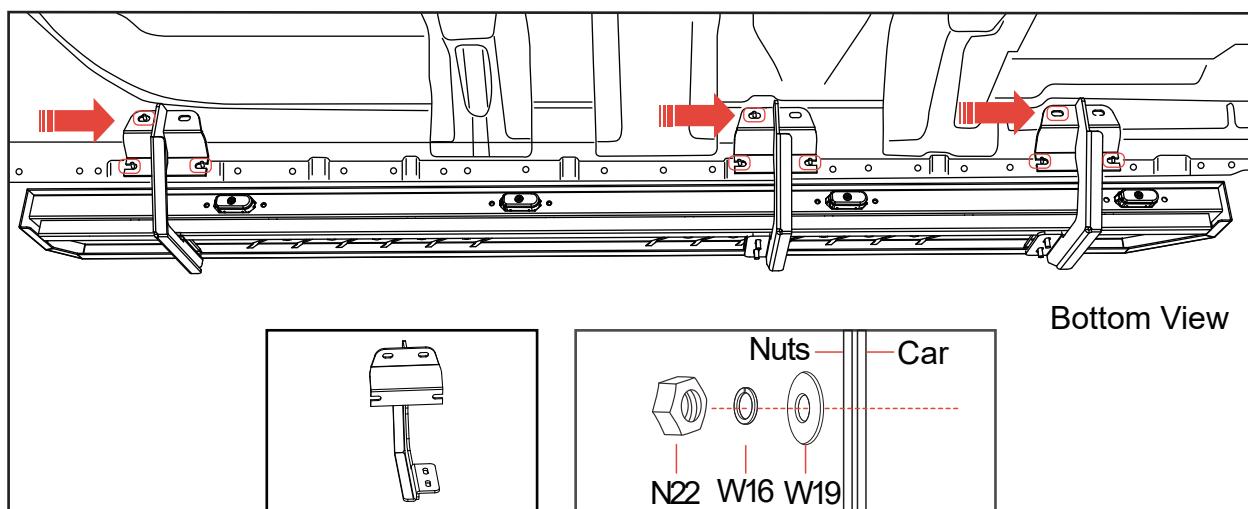

## INSTALLATION II

### Secure the side step to the bracket.


1. Secure the side step to the bracket with the bolt plate.

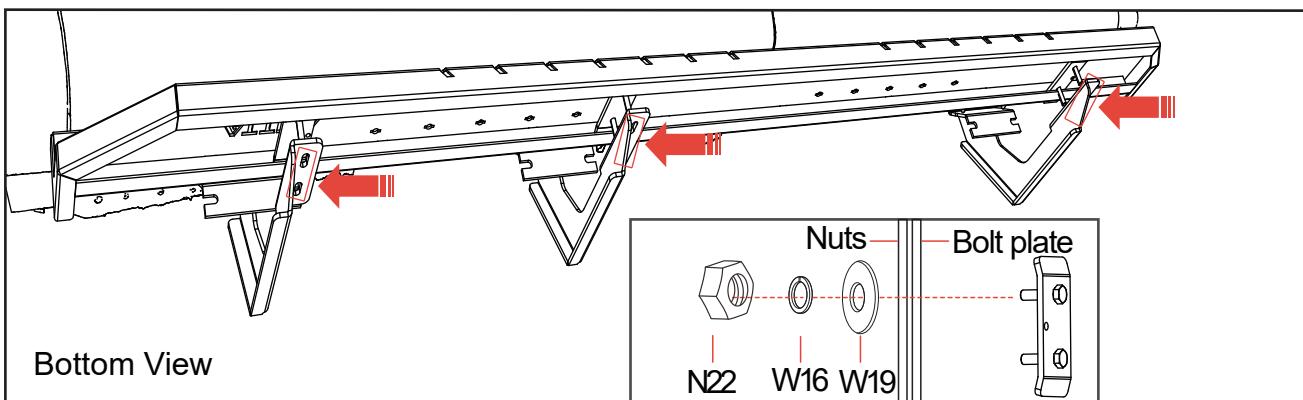

## INSTALLTION III

### Install the lights on the side step.


1. Connect the wiring harness plug to the light, then connect the harness to the vehicle's turn signal and daytime running light (DRL) wiring.

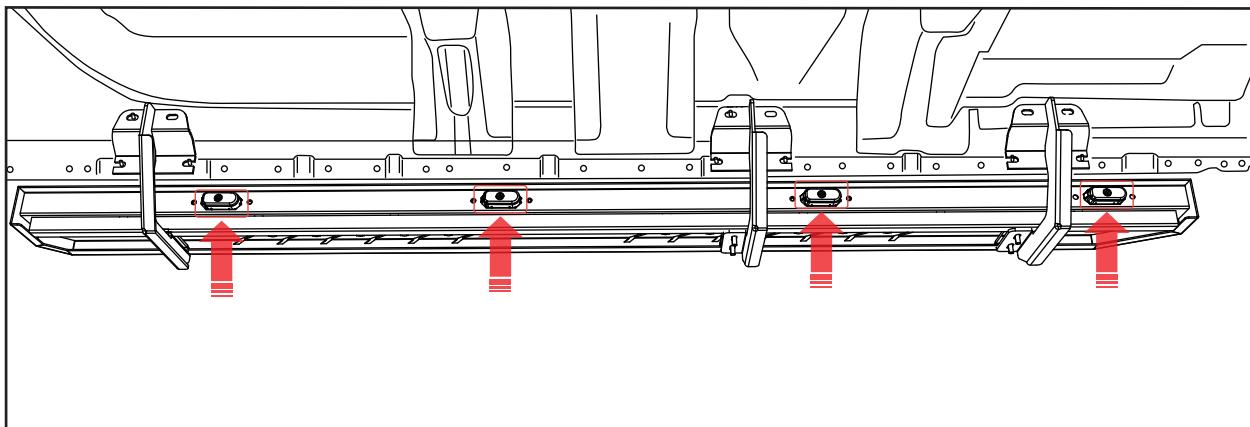

2. Proceed to the passenger side and repeat the process.

## INSTALLTION IV

### Wiring the tool light.

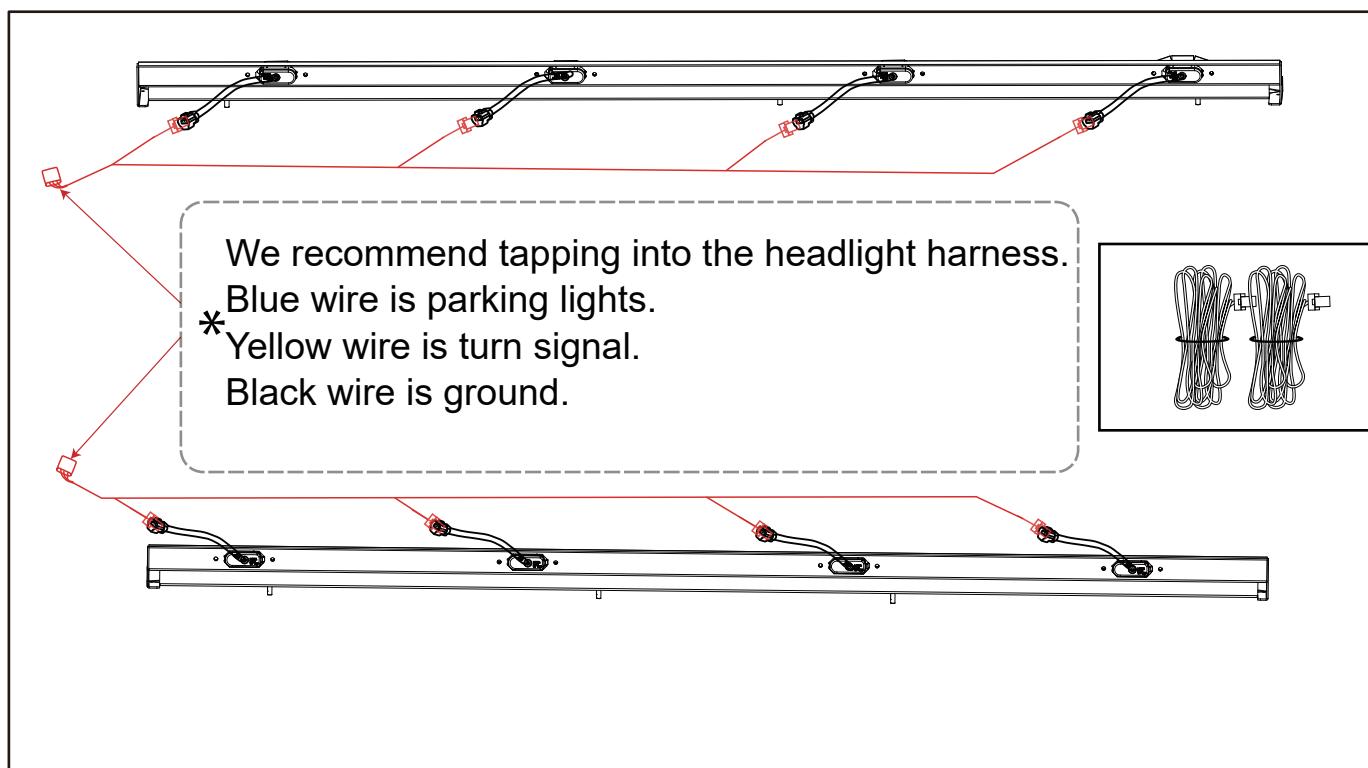



## FINAL STEP

### EMBRACE THE ADVENTURE

Enjoy the look of your new vehicle! Be sure to review all mounting bolts and re-tighten if needed. Perform occasional checks to keep everything secure. If you have any questions, please email us at [Tech@attica4x4.com](mailto:Tech@attica4x4.com).

**Thank you for choosing our brand to be part of your journey!** As Attica 4x4's reputation grew, so did its community—a vibrant tapestry of off-road enthusiasts united by a shared love for exploration, craftsmanship, and the open road. From the sunlit trails of Southern California to the challenging terrains across the nation, and now to your next adventure with Attica 4x4!